


A10s Plus-N

Receiving Card

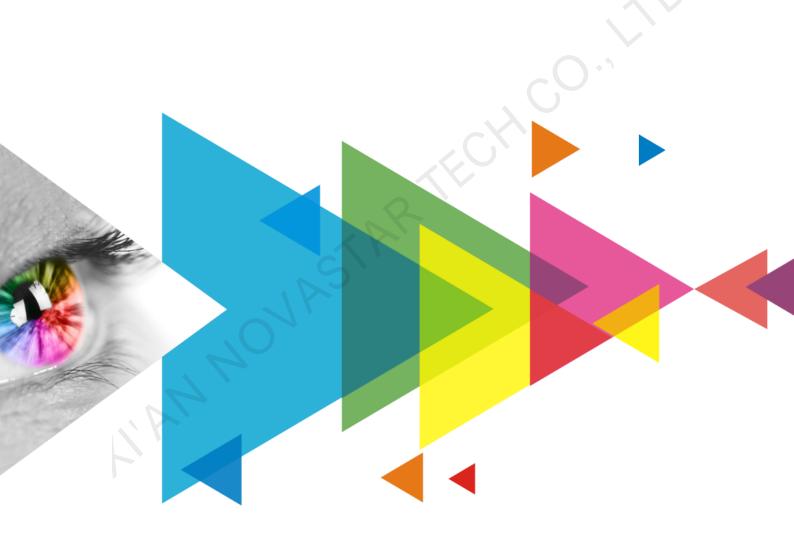

Specifications

Document Version	Release Date	Description
V1.0.3	2022-01-26	Added the dimensions diagram description.Updated the pins section.
V1.0.2	2021-12-03	Updated the certification description.Updated the description of features.
V1.0.1	2021-08-18	Updated the side-view dimensions diagram.
V1.0.0	2021-07-30	First release

Change History

Introduction

The A10s Plus-N is a high-end small receiving card developed by NovaStar. A single A10s Plus-N supports resolutions up to 512×512 pixels. Adopting the exclusive Image Booster technology of NovaStar, the A10s Plus-N can precisely calibrate the color gamut and grayscale of the screen, and improve the grayscale by 64 times. It also supports the pixel level brightness and chroma calibration, individual gamma adjustment for RGB, low latency, 3D and HDR functions, significantly improving the brightness, grayscale and color performance from every aspect and offering users an ultimate visual experience with a uniform, smooth and lifelike image.

The A10s Plus-N uses high-density connectors for communication to limit the effects of dust and vibration, resulting in high stability. It supports up to 32 groups of parallel RGB data or 64 groups of serial data (expandable to 128 groups of serial data). Its reserved pins allow for custom functions of users. Thanks to its EMC Class B compliant hardware design, the A10s Plus-N has improved electromagnetic compatibility and is suitable for various on-site setups that have high requirements.

Certifications

RoHS, EMC Class B

If the product does not have the relevant certifications required by the countries or regions where it is to be sold, please contact NovaStar to confirm or address the problem. Otherwise, the customer shall be responsible for the legal risks caused or NovaStar has the right to claim compensation.

Features

Improvements to Display Effect

Image Booster
 The Image Booster has the following 3 functions
 that improve the display effect (the actual effect

depends on the driver IC) from different dimensions.

 Color Management: Allow users to freely switch the color gamut of the screen between different gamuts in real time to enable more precise colors on the screen.



- Precise Grayscale: Individually correct the 65,536 levels of grayscale (16bit) of the driver IC to fix the display problems at low grayscale conditions, such as brightness spikes, brightness dips, color cast and mottling. This function can also better assist other display technologies, such as 22bit+ and individual gamma adjustment for RGB, allowing for a smoother and uniform image.
- 22bit+: Improve the LED display grayscale by 64 times to avoid grayscale loss due to low brightness and allow for more details in dark areas and a smoother image.

NovaLCT V5.4.0 or later is required.

- Pixel level brightness and chroma calibration Work with NovaStar's high-precision calibration system to calibrate the brightness and chroma of each pixel, effectively removing brightness differences and chroma differences, and enabling high brightness consistency and chroma consistency.
- Quick adjustment of dark or bright lines The dark or bright lines caused by splicing of cabinets or modules can be adjusted to improve the visual experience. This function is easy to use and the adjustment takes effect immediately.
- Low latency The latency of video source on the receiving card end can be reduced to 1 frame (only when using modules with driver IC with built-in RAM).
- 3D function Working with the sending card that supports 3D function, the receiving card supports 3D image output.
- Individual gamma adjustment for RGB Working with NovaLCT (V5.2.0 or later) and the sending card that supports this function, the receiving card supports individual adjustment of red gamma, green gamma and blue gamma, which can effectively control image nonuniformity at low grayscale conditions and white balance offset, allowing for a more realistic image.
- Image rotation in 90° increments The display image can be set to rotate in multiples of 90° (0°/ 90°/180°/270°).
- Image rotation at any angle

Working with SmartLCT and the MCTRL R5 LED display controller, the receiving card supports image rotation at any angle.

HDR
 HDR10 and HLG are supported.

Work with the sending card that supports the HDR function to correctly parse the HDR video source and faithfully reproduce the original brightness range and color space, allowing for a more lifelike image.

Improvements to Maintainability

- Smart module (dedicated firmware required) Working with the smart module, the receiving card supports module ID management, storage of calibration coefficients and module parameters, monitoring of module temperature, voltage and flat cable communication status, LED error detection, and recording of the module run time.
 - Automatic module calibration After a new module with flash memory is installed to replace the old one, the calibration coefficients stored in the flash memory can be automatically uploaded to the receiving card when it is powered on.
- Quick uploading of calibration coefficients The calibration coefficients can be quickly uploaded to the receiving card, improving efficiency greatly.
- Module Flash management For modules with flash memory, the information stored in the memory can be managed. The calibration coefficients and module ID can be stored and read back.
- One click to apply calibration coefficients in module Flash For modules with flash memory, when the Ethernet cable is disconnected, users can hold down the self-test button on the cabinet to upload the calibration coefficients in the flash memory of the module to the receiving card.
- Mapping function The cabinets display the receiving card number and Ethernet port information, allowing users to



easily obtain the locations and connection topology of receiving cards.

- Setting of a pre-stored image in receiving card The image displayed during startup, or displayed when the Ethernet cable is disconnected or there is no video signal can be customized.
- Temperature and voltage monitoring The temperature and voltage of the receiving card can be monitored without using peripherals.
- Cabinet LCD The LCD module connected to the cabinet can display the temperature, voltage, single run time and total run time of the receiving card.
- Bit error detection The Ethernet port communication quality of the receiving card can be monitored and the number of erroneous packets can be recorded to help troubleshoot network communication problems.
 - NovaLCT V5.2.0 or later is required.
- Status detection of dual power supplies When two power supplies are used, their working status can be detected by the receiving card.
- Firmware program readback The firmware program of the receiving card can be read back and saved to the local computer.
 - NovaLCT V5.2.0 or later is required.
- Configuration parameter readback The configuration parameters of the receiving card can be read back and saved to the local computer.
- LVDS transmission (dedicated firmware required)
 Low-voltage differential signaling (LVDS)
 transmission is used to reduce the number of data cables from the hub board to module, increase the transmission distance, and improve the signal transmission quality and electromagnetic compatibility (EMC).

Improvements to Reliability

 Dual card backup and status monitoring In an application with requirements for high reliability, two receiving cards can be mounted onto a single hub board for backup. When the primary receiving card fails, the backup card can serve immediately to ensure uninterrupted operation of the display.


The working status of the primary and backup receiving cards can be monitored in NovaLCT V5.2.0 or later.

Loop backup

The receiving cards and the sending card form a loop via the primary and backup line connections. When a fault occurs at a location of the lines, the screen can still display the image normally.

- Dual backup of configuration parameters The receiving card configuration parameters are stored in the application area and factory area of the receiving card at the same time. Users usually use the configuration parameters in the application area. If necessary, users can restore the configuration parameters in the factory area to the application area.
- Dual program backup Two copies of firmware program are stored in the application area of the receiving card at the factory to avoid the problem that the receiving card may get stuck abnormally during program update.
- Dual backup of calibration coefficients The calibration coefficients are stored in the application area and factory area of the receiving card at the same time. Users usually use the calibration coefficients in the application area. If necessary, users can restore the calibration coefficients in the factory area to the application area.

Appearance

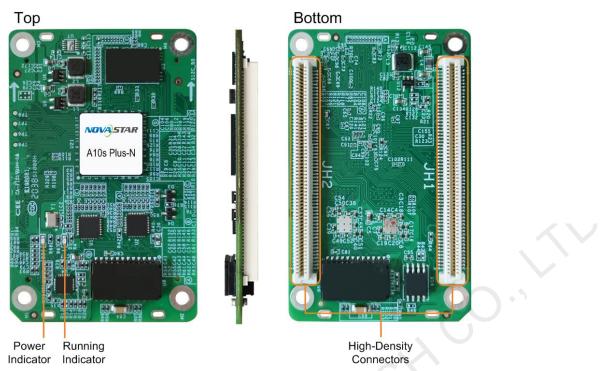


All product pictures shown in this document are for illustration purpose only. Actual product may vary.

Indicator	Color	Status	Description
Running indicator	Green	Flashing once every 1s	The receiving card is functioning normally. Ethernet cable connection is normal, and video source input is available.
		Flashing once every 3s	Ethernet cable connection is abnormal.
		Flashing 3 times every 0.5s	Ethernet cable connection is normal, but no video source input is available.
	$\langle \rangle$	Flashing once every 0.2s	The receiving card failed to load the program in the application area and is now using the backup program.
I'P		Flashing 8 times every 0.5s	A redundancy switchover occurred on the Ethernet port and the loop backup has taken effect.
Power indicator	Red	Always on	The power input is normal.

Indicators

Dimensions

The board thickness is not greater than 2.0 mm, and the total thickness (board thickness + thickness of components on the top and bottom sides) is not greater than 8.5 mm. Ground connection (GND) is enabled for mounting holes.

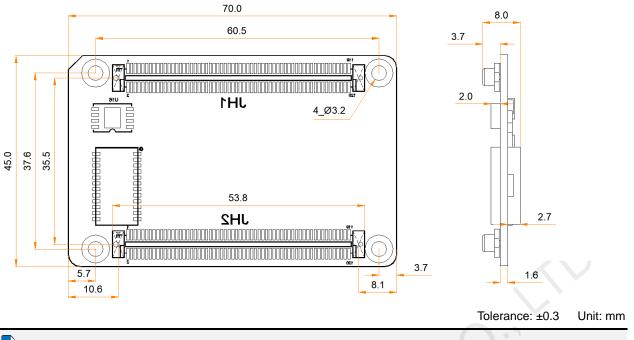


Note


The distance between outer surfaces of the A10s Plus-N and hub boards after their high-density connectors fit together is 5.0 mm. A 5-mm copper pillar is recommended.

To make molds or trepan mounting holes, please contact NovaStar for a higher-precision structural drawing.

Pins

32 Groups of Parallel RGB Data

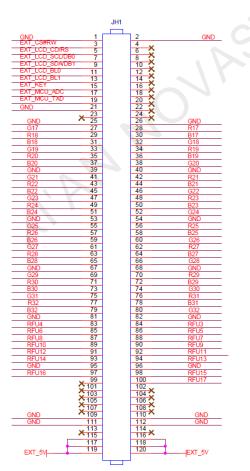

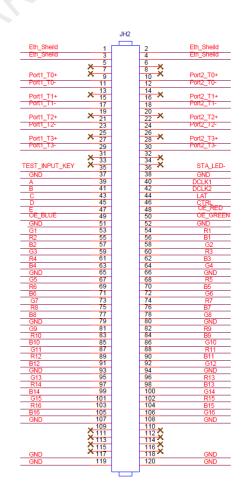

GND 1 2 GND LCD CS signal EXT LCD_CD/RS 5 6 NC LCD RK signal EXT_LCD_CD/RS 5 6 NC LCD book signal EXT_LCD_SOL/DB0 7 8 NC LCD backlight signal 1 EXT_LCD_SOL/DB0 7 8 NC LCD backlight signal 2 EXT_LCD_EL0 11 12 NC LCD backlight signal 2 EXT_LCD_LD EL1 13 14 NC LCD control button EXT_KEY 15 16 NC Areserved pin for MCU connection GND 21 22 NC / G17 27 28 R17 / / G18 33 34 R19 / / R20 36 86	JH1						
LCD RS signal EXT_LCD_SU/DB0 7 8 NC LCD dack signal EXT_LCD_SU/DB0 7 8 NC LCD dack signal EXT_LCD_SU/DB1 9 10 NC LCD backlight signal 2 EXT_LCD_BL0 11 12 NC LCD backlight signal 2 EXT_LCD_BL0 11 14 NC LCD backlight signal 2 EXT_LCD_BL0 17 18 NC LCD control button EXT_KEV 15 16 NC Connection GND 21 22 NC Connection GND 23 24 NC / G17 27 28 R17 / / G17 27 28 R17 / / R18 31 32 G18 / / R20 37 38 G20 / / R21 41 42 R21 / / G21 41 42<		GND	1	2	GND		
LCD RS signal EXT_LCD_CD/RS 5 6 NC LCD data signal EXT_LCD_SUDB0 7 8 NC LCD data signal EXT_LCD_SUDB1 9 10 NC LCD backlight signal 2 EXT_LCD_BL0 11 12 NC LCD backlight signal 2 EXT_LCD_BL0 11 14 NC LCD backlight signal 2 EXT_LCD_BL0 17 18 NC LCD control button EXT_KEV 15 16 NC Connection GND 21 22 NC Connection GND 23 24 NC / G17 27 28 R17 / / G17 27 28 R17 / / R18 31 32 G18 / / R20 37 38 G20 / / B20 37 38 G20 / / B21 H 42	LCD CS signal	EXT_CS#RW	3	4	NC		
LCD clock signal EXT_LCD_SCL/DB0 7 8 NC LCD backlight signal 1 EXT_LCD_SDAVDB1 9 10 NC LCD backlight signal 1 EXT_LCD_BL0 11 12 NC LCD backlight signal 2 EXT_LCD_BL0 11 14 NC LCD control button EXT_KEY 15 16 NC Areserved pin for MCU EXT_MCU_ADC 17 18 NC Areserved pin for MCU EXT_MCU_TXD 19 20 NC / GND 25 26 GND / GID 27 28 R17 / / GID 25 26 GND / / GID 27 28 R17 / / GID 25 36 B19 / / GID 33 34 R19 / / B20 37 38 G20 / / GRD 53 </td <td></td> <td>EXT_LCD_CD/RS</td> <td>5</td> <td>6</td> <td>NC</td> <td></td>		EXT_LCD_CD/RS	5	6	NC		
LCD backlight signal 1 EXT_LCD_BL1 11 12 NC LCD backlight signal 2 EXT_KCP 15 16 NC Areserved pin for MCU connection EXT_KCY 15 16 NC A reserved pin for MCU connection EXT_KCY 15 16 NC MC 23 24 NC MC 23 24 NC MC 23 24 NC MC 23 24 NC MC GND 25 26 GND / G17 27 28 R17 / / R18 29 30 B17 / / R20 35 36 B19 / / R20 35 36 B19 / / R22 43 44 B21 / / R22 45 46 G32 /			7	8	NC		
LCD backlight signal 1 EXT_LCD_BL1 11 12 NC LCD backlight signal 2 EXT_KCP 15 16 NC Areserved pin for MCU connection EXT_KCY 15 16 NC A reserved pin for MCU connection EXT_KCY 15 16 NC MC 23 24 NC MC 23 24 NC MC 23 24 NC MC 23 24 NC MC GND 25 26 GND / G17 27 28 R17 / / R18 29 30 B17 / / R20 35 36 B19 / / R20 35 36 B19 / / R22 43 44 B21 / / R22 45 46 G32 /			9	10	NC		
LCD backlight signal 2 EXT_LCD_BL1 13 14 NC LCD control button EXT_KEY 15 16 NC Areserved pin for MCU connection EXT_MCU_ADC 17 18 NC Areserved pin for MCU connection EXT_MCU_TXD 19 20 NC GND 21 22 NC	Ţ						
LCD control button EXT_KEY 15 16 NC A reserved pin for MCU connection EXT_MCU_ADC 17 18 NC A reserved pin for MCU connection EXT_MCU_TXD 19 20 NC NC 23 24 NC							
A reserved pin for MCU connection EXT_MCU_ADC 17 18 NC A reserved pin for MCU connection EXT_MCU_TXD 19 20 NC NC 23 24 NC MC 23 24 NC GND 21 22 NC / G17 27 28 R17 / / R18 29 30 B17 / / R18 29 30 B17 / / R18 31 32 G18 / / R20 35 36 B19 / / R20 37 38 G20 / / G21 41 42 R21 / / G21 41 42 R21 / / G21 41 42 R21 / / G23 47 48 R23 / / <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td></t<>							
Areserved pin for MCU connection EXT_MCU_TXD 19 20 NC NC 23 24 NC GND 25 26 GND / G17 27 28 R17 / R18 29 30 B17 / / B18 31 32 G18 / / G19 33 34 R19 / / B20 37 38 G20 / / B20 37 38 G20 / / B20 37 38 G20 / / G21 41 42 R21 / / R22 43 44 B21 / / R24 49 50 B23 / / R24 52 G24 / / B26 55 56 R25 / / R26	A reserved pin for MCU			18			
NC 23 24 NC GND 25 26 GND / G17 27 28 R17 / / R18 29 30 B17 / / B18 31 32 G18 / / G19 33 34 R19 / / R20 35 36 B19 / / R20 37 38 G20 / / B20 37 38 G20 / / R21 / / / / / R22 45 46 G22 / / R24 49 50 B23 / / R24 51 52 G24 / / R26 57 58 B25 / / R26 59 60 G26 / / R	A reserved pin for MCU	EXT_MCU_TXD	19	20	NC		
GND 25 26 GND / G17 27 28 R17 / / R18 29 30 B17 / / B18 31 32 G18 / / G19 33 34 R19 / / R20 35 36 B19 / / B20 37 38 G20 / / B20 37 38 G20 / / B20 37 38 G20 / / B21 41 42 R21 / / B22 45 46 G22 / / B22 45 46 G22 / / B24 51 52 G24 / / B24 51 52 G24 / / B26 59 60 G26 / <td></td> <td>GND</td> <td>21</td> <td>22</td> <td>NC</td> <td></td>		GND	21	22	NC		
/ G17 27 28 R17 / / R18 29 30 B17 / / B18 31 32 G18 / / G19 33 34 R19 / / R20 35 36 B19 / / R20 35 36 B19 / / R20 35 36 B19 / / G20 37 38 G20 / / G21 41 42 R21 / / G23 47 48 R23 / / R24 49 50 B23 / / R25 55 56 R25 / / R26 57 58 B25 / / R26 59 60 G26 / / R26 57 58 <		NC	23	24	NC		
/ R18 29 30 B17 / / B18 31 32 G18 / / G19 33 34 R19 / / R20 35 36 B19 / / B20 37 38 G20 / / B20 37 38 G20 / / G21 41 42 R21 / / G21 41 42 R21 / / G21 41 42 R21 / / B22 45 46 G22 / / B23 47 48 R23 / / B24 51 52 G24 / / B24 51 52 G24 / / B26 59 60 G26 / / B26 59 60 G26 / / B28 65 66 G28 /		GND	25	26	GND		
/ B18 31 32 G18 / / G19 33 34 R19 / / R20 35 36 B19 / / R20 37 38 G20 / GND 39 40 GND GND // / G21 41 42 R21 / / R22 43 44 B21 / / R22 45 46 G22 / / R24 49 50 B23 / / R24 51 52 G24 / / B24 51 52 G24 / / B26 55 56 R25 / / B26 57 58 B25 / / B26 59 60 G26 / / R28 63 64 B27 / / B28 65 66 G28 /	/	G17	27	28	R17	1	
/ G19 33 34 R19 / / R20 35 36 B19 / / B20 37 38 G20 / GND 39 40 GND -/ / G21 41 42 R21 / / R22 43 44 B21 / / B22 45 46 G22 / / G23 47 48 R23 / / G23 47 48 R23 / / G23 47 48 R23 / / B24 51 52 G24 / / B24 51 52 G24 / / G25 55 56 R25 / / B26 59 60 G26 / / B28 65 66 G28 / / G29 69 70 R29 / <td< td=""><td>/</td><td>R18</td><td>29</td><td>30</td><td>B17</td><td>1</td></td<>	/	R18	29	30	B17	1	
/ G19 33 34 R19 / / R20 35 36 B19 / / B20 37 38 G20 / GND 39 40 GND -/ / G21 41 42 R21 / / R22 43 44 B21 / / B22 45 46 G22 / / G23 47 48 R23 / / G23 47 48 R23 / / G23 47 48 R23 / / G23 52 G24 / / / B24 51 52 G24 / / G25 55 56 R25 / / R26 57 58 B25 / / B26 59 60 G26 / / G27 61 62 R27 /	/	B18	31	32	G18	1	
/ R20 35 36 B19 / / B20 37 38 G20 / GND 39 40 GND // / G21 41 42 R21 / / R22 43 44 B21 / / B22 45 46 G22 / / G23 47 48 R23 / / R24 49 50 B23 / / B24 51 52 G24 / / B26 55 56 R25 / / B26 59 60 G26 / / B26 59 60 G26 / / B28 65 66 G28 / / B28 65 66 G28 / / B30 73 74 G30	/					1	
/ B20 37 38 G20 / GND 39 40 GND GND // / G21 41 42 R21 / / R22 43 44 B21 / / B22 45 46 G22 / / G23 47 48 R23 / / B24 51 52 G24 / / B24 51 52 G24 / / B25 55 56 R25 / / R26 57 58 B25 / / B26 59 60 G26 / / R28 63 64 B27 / / B28 65 66 G28 / / R30 71 72 B29 / / B30 73 74				36		1	
GND 39 40 GND / G21 41 42 R21 / / R22 43 44 B21 / / B22 45 46 G22 / / G23 47 48 R23 / / R24 49 50 B23 / / R24 49 50 B23 / / R24 51 52 G24 / / B24 51 52 G24 / / R26 57 58 B25 / / R26 57 58 B25 / / B28 65 66 G28 / / B28 65 66 G28 / / B29 69 70 R29 / / B29 69 70 R29 / <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>							
/ G21 41 42 R21 / / R22 43 44 B21 / / B22 45 46 G22 / / G23 47 48 R23 / / R24 49 50 B23 / / R24 49 50 B23 / / B24 51 52 G24 / / B26 59 60 G26 / / R26 57 58 B25 / / B26 59 60 G26 / / B26 59 60 G26 / / B28 65 66 G28 / / B28 65 66 G28 / / G29 69 70 R29 / / R30 71 72 <	,					,	
/ R22 43 44 B21 / / B22 45 46 G22 / / G23 47 48 R23 / / R24 49 50 B23 / / B24 51 52 G24 / / B24 51 52 G24 / / B24 51 52 G24 / / G25 55 56 R25 / / R26 57 58 B25 / / B26 59 60 G26 / / R28 63 64 B27 / / B28 65 66 G28 / / B28 65 66 G28 / / G29 69 70 R29 / / R30 73 74 <	1					1	
/ B22 45 46 G22 / / G23 47 48 R23 / / R24 49 50 B23 / / B24 51 52 G24 / GND 53 54 GND - - / G25 55 56 R25 / / R26 57 58 B25 / / B26 59 60 G26 / / R28 63 64 B27 / / R28 63 64 B27 / / B28 65 66 G28 / / B30 73 74 G30 / / G31 75 76 R31 / / B32 79 80 G32 / / B32 79 80 <	/					/	
/ G23 47 48 R23 / / R24 49 50 B23 / / B24 51 52 G24 / / GND 53 54 GND ////////////////////////////////////	/					/	
/ R24 49 50 B23 / / B24 51 52 G24 / GND 53 54 GND / / G25 55 56 R25 / / R26 57 58 B25 / / B26 59 60 G26 / / G27 61 62 R27 / / G28 63 64 B27 / / B28 65 66 G28 / / B28 67 68 GND / / G29 69 70 R29 / / R30 73 74 G30	1					1	
/ B24 51 52 G24 / GND 53 54 GND GC GC / GC						1	
GND 53 54 GND / G25 55 56 R25 / / R26 57 58 B25 / / B26 59 60 G26 / / G27 61 62 R27 / / G27 61 62 R27 / / R28 63 64 B27 / / B28 65 66 G28 / / G29 69 70 R29 / / R30 71 72 B29 / / B30 73 74 G30 / <td></td> <td></td> <td></td> <td></td> <td></td> <td>1</td>						1	
/ G25 55 56 R25 / / R26 57 58 B25 / / B26 59 60 G26 / / G27 61 62 R27 / / R28 63 64 B27 / / B28 65 66 G28 / / B28 65 66 G28 / / G29 69 70 R29 / / R30 71 72 B29 / / B30 73 74 G30 / / G31 75 76 R31 / / B32 79 80 G32 / / B32 79 80 G32 / / RFU4 83 84 RFU3 / / RFU4 83 86	/					1	
/ R26 57 58 B25 / / B26 59 60 G26 / / G27 61 62 R27 / / R28 63 64 B27 / / B28 65 66 G28 / / B28 65 66 G28 / / GND 67 68 GND / / G29 69 70 R29 / / R30 71 72 B29 / / B30 73 74 G30 / / G31 75 76 R31 / / R32 79 80 G32 / / B32 79 80 G32 / / RFU4 83 84 RFU3 / / RFU6 85 86 RFU5 / / RFU8 87 88 RFU7 / </td <td>1</td> <td></td> <td></td> <td></td> <td></td> <td>1</td>	1					1	
/ B26 59 60 G26 / / G27 61 62 R27 / / R28 63 64 B27 / / B28 65 66 G28 / / B28 65 66 G28 / / GND 67 68 GND / / G29 69 70 R29 / / R30 71 72 B29 / / B30 73 74 G30 / / G31 75 76 R31 / / B32 79 80 G32 / / B32 79 80 G32 / / RFU4 83 84 RFU3 / / RFU6 85 86 RFU5 / / RFU8 87 88						1	
/ G27 61 62 R27 / / R28 63 64 B27 / / B28 65 66 G28 / / GND 67 68 GND / / G29 69 70 R29 / / R30 71 72 B29 / / B30 73 74 G30 / / G31 75 76 R31 / / R32 77 78 B31 / / B32 79 80 G32 / / B32 79 80 G32 / / RFU4 83 84 RFU3 / / RFU4 83 86 RFU5 / / RFU8 87 88 RFU7 / / RFU8 87 88	1					1	
/ R28 63 64 B27 / / B28 65 66 G28 / GND 67 68 GND / / G29 69 70 R29 / / R30 71 72 B29 / / B30 73 74 G30 / / G31 75 76 R31 / / R32 77 78 B31 / / B32 79 80 G32 / / B32 79 80 G32 / / B32 79 80 G32 / / RFU4 83 84 RFU3 / / RFU4 83 84 RFU3 / / RFU8 87 88 RFU7 / / RFU8 87 88 RFU7	1					1	
/ B28 65 66 G28 / GND 67 68 GND GND 67 68 GND / / G29 69 70 R29 / / / R30 71 72 B29 / / B30 73 74 G30 / / G31 75 76 R31 / / R32 77 78 B31 / / B32 79 80 G32 / / B32 79 80 G32 / / B32 79 80 G32 / / RFU4 83 84 RFU3 / / RFU4 83 84 RFU3 / / RFU6 85 86 RFU7 / / RFU8 87 88 RFU7 /	1					1	
GND 67 68 GND / G29 69 70 R29 / / R30 71 72 B29 / / B30 73 74 G30 / / G31 75 76 R31 / / R32 77 78 B31 / / R32 79 80 G32 / / B32 79 80 G32 / / B32 79 80 G32 / / RFU4 83 84 RFU3 / / RFU6 85 86 RFU5 / / RFU8 87 88 RFU7 / / RFU8 87 88 RFU7 / / RFU10 89 90 RFU9 / / RFU12 91 92 RFU11 <td< td=""><td>1</td><td></td><td></td><td></td><td></td><td>1</td></td<>	1					1	
/ G29 69 70 R29 / / R30 71 72 B29 / / B30 73 74 G30 / / G31 75 76 R31 / / R32 77 78 B31 / / R32 79 80 G32 / / B32 79 80 G32 / / B32 79 80 G32 / / RS2 79 80 G32 / / RFU4 83 84 RFU3 / / RFU6 85 86 RFU5 / / RFU8 87 88 RFU7 / / RFU10 89 90 RFU9 / / RFU12 91 92 RFU11 / / RFU14 93 94	/					/	
/ G29 69 70 R29 7 / R30 71 72 B29 / / B30 73 74 G30 / / G31 75 76 R31 / / G31 75 76 R31 / / R32 77 78 B31 / / B32 79 80 G32 / / RFU4 83 84 RFU3 / / RFU6 85 86 RFU5 / / RFU8 87 88 RFU7 / / RFU10 89 90						,	
/ B30 73 74 G30 / / G31 75 76 R31 / / R32 77 78 B31 / / B32 79 80 G32 / / RFU4 83 84 RFU3 / / RFU4 83 84 RFU3 / / RFU6 85 86 RFU7 / / RFU10 89 90 RFU9 / / RFU12 91 92 RFU11 / / RFU14 93 94	1					1	
/ G31 75 76 R31 / / R32 77 78 B31 / / B32 79 80 G32 / / GND 81 82 GND / / RFU4 83 84 RFU3 / / RFU6 85 86 RFU5 / / RFU8 87 88 RFU7 / / RFU10 89 90 RFU9 / / RFU12 91 92 RFU11 / / RFU14 93 94 RFU13 / / GND 95						/	
/ R32 77 78 B31 / / B32 79 80 G32 / GND 81 82 GND GND // // / RFU4 83 84 RFU3 / / RFU6 85 86 RFU5 / / RFU8 87 88 RFU7 / / RFU10 89 90 RFU9 / / RFU12 91 92 RFU11 / / RFU14 93 94 RFU13 / / RFU16 97 98 RFU15 /						/	
/ B32 79 80 G32 / GND 81 82 GND </td <td></td> <td></td> <td></td> <td></td> <td></td> <td>/</td>						/	
GND 81 82 GND / RFU4 83 84 RFU3 / / RFU6 85 86 RFU5 / / RFU8 87 88 RFU7 / / RFU10 89 90 RFU9 / / RFU12 91 92 RFU11 / / RFU14 93 94 RFU13 / / RFU14 93 96 GND / / RFU16 97 98 RFU15 /						/	
/ RFU4 83 84 RFU3 / / RFU6 85 86 RFU5 / / RFU8 87 88 RFU7 / / RFU10 89 90 RFU9 / / RFU12 91 92 RFU11 / / RFU14 93 94 RFU13 / / RFU14 93 96 GND / / RFU16 97 98 RFU15 /	/					/	
/ RFU6 85 86 RFU5 / / RFU8 87 88 RFU7 / / RFU10 89 90 RFU9 / / RFU12 91 92 RFU11 / / RFU14 93 94 RFU13 / / RFU16 97 98 RFU15 /							
/ RFU8 87 88 RFU7 / / RFU10 89 90 RFU9 / / RFU12 91 92 RFU11 / / RFU14 93 94 RFU13 / GND 95 96 GND / / RFU16 97 98 RFU15 /	/					/	
/ RFU10 89 90 RFU9 / / RFU12 91 92 RFU11 / / RFU14 93 94 RFU13 / GND 95 96 GND	/		85	86		/	
/ RFU12 91 92 RFU11 / / RFU14 93 94 RFU13 / GND 95 96 GND / / RFU16 97 98 RFU15 /	/		87	88		/	
/ RFU14 93 94 RFU13 / GND 95 96 GND / RFU16 97 98 RFU15 /	/	RFU10	89	90	RFU9	/	
GND 95 96 GND / RFU16 97 98 RFU15 /	/	RFU12	91	92	RFU11	/	
/ RFU16 97 98 RFU15 /	/	RFU14	93	94	RFU13	/	
		GND	95	96	GND		
	/	RFU16	97	98	RFU15	/	
NC 99 100 RFU17 /		NC	99	100	RFU17	/	
NC 101 102 NC		NC	101	102	NC		
NC 103 104 NC		NC	103	104	NC		

JH1							
	NC	105	106	NC			
	NC	107	108	NC			
	GND	109	110	GND			
	GND	111	112	GND			
	NC	113	114	NC			
	EXT_5V	115	116	EXT_5V			
	EXT_5V	117	118	EXT_5V			
	EXT_5V	119	120	EXT_5V			

JH2						
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground	
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground	
	NC	5	6	NC		
	NC	7	8	NC		
	Port1_T0+	9	10	Port2_T0+		
	Port1_T0-	11	12	Port2_T0-		
	NC	13	14	NC		
	Port1_T1+	15	16	Port2_T1+) •)	
	Port1_T1-	17	18	Port2_T1-		
Gigabit Ethernet port	NC	19	20	NC	Gigabit Ethernet port	
	Port1_T2+	21	22	Port2_T2+		
	Port1_T2-	23	24	Port2_T2-		
	NC	25	26	NC		
	Port1_T3+	27	28	Port2_T3+		
	Port1_T3-	29	30	Port2_T3-		
	NC	31	32	NC		
	NC	33	34	NC		
Test button	TEST_INPUT_KEY	35	36	STA_LED-	Running indicator (active low)	
	GND	37	38	GND		
Line decoding signal	А	39	40	DCLK1	Shift clock output 1	
Line decoding signal	В	41	42	DCLK2	Shift clock output 2	
Line decoding signal	С	43	44	LAT	Latch signal output	
Line decoding signal	D	45	46	CTRL	Afterglow control signal	
Line decoding signal	E	47	48	OE_RED	Display enable signal	
Display enable signal	OE_BLUE	49	50	OE_GREEN	Display enable signal	
7	GND	51	52	GND		
	G1	53	54	R1	/	
	R2	55	56	B1	/	
1	B2	57	58	G2	/	
/	G3	59	60	R3	/	
/	R4	61	62	B3	/	
/	B4	63	64	G4	/	
	GND	65	66	GND		
/	G5	67	68	R5	/	
/	R6	69	70	B5	/	
/	B6	71	72	G6	/	
/	G7	73	74	R7	/	
/	R8	75	76	B7	/	
/	B8	77	78	G8	/	
	GND	79	80	GND		
/	G9	81	82	R9	/	
/	R10	83	84	B9	/	
					·	



JH2						
/	B10	85	86	G10	/	
/	G11	87	88	R11	/	
/	R12	89	90	B11	/	
/	B12	91	92	G12	/	
	GND	93	94	GND		
/	G13	95	96	R13	/	
/	R14	97	98	B13	/	
/	B14	99	100	G14	/	
/	G15	101	102	R15	/	
/	R16	103	104	B15	/	
/	B16	105	106	G16	/	
	GND	107	108	GND		
	NC	109	110	NC		
	NC	111	112	NC		
	NC	113	114	NC		
	NC	115	116	NC		
	GND	117	118	GND		
	GND	119	120	GND		

64 Groups of Serial Data



JH1						
	GND	1	2	GND		
LCD CS signal	EXT_CS#RW	3	4	NC		
LCD RS signal	EXT_LCD_CD/RS	5	6	NC		
LCD clock signal	EXT_LCD_SCL/DB0	7	8	NC		
LCD data signal	EXT_LCD_SDA/DB1	9	10	NC		
LCD backlight signal 1	EXT_LCD_BL0	11	12	NC		

		JH1			
LCD backlight signal 2	EXT_LCD_BL1	13	14	NC	
LCD control button	EXT_KEY	15	16	NC	
A reserved pin for MCU connection	EXT_MCU_ADC	17	18	NC	
A reserved pin for MCU connection	EXT_MCU_TXD	19	20	NC	
	GND	21	22	NC	
	NC	23	24	NC	
	GND	25	26	GND	
/	Data50	27	28	Data49	/
/	Data52	29	30	Data51	/
/	Data54	31	32	Data53	/
/	Data56	33	34	Data55	/
/	Data58	35	36	Data57	/
/	Data60	37	38	Data59	
	GND	39	40	GND	
/	Data62	41	42	Data61	/
/	Data64	43	44	Data63	/
	NC	45	46	NC	*)
	NC	47	48	NC	
	NC NC	49	50 52	NC NC	
		51	52		
	GND NC	53 55	54	GND NC	
	NC	55	58	NC	
	NC	59	60	NC	
	NC	61	62	NC	
	NC	63	64	NC	
	NC	65	66	NC	
	GND	67	68	GND	
	NC	69	70	NC	
	NC	71	72	NC	
	NC	73	74	NC	
	NC	75	76	NC	
	NC	77	78	NC	
	NC	79	80	NC	
	GND	81	82	GND	
	RFU4	83	84	RFU3	/
	RFU6	85	86	RFU5	/
1	RFU8	87	88	RFU7	/
/	RFU10	89	90	RFU9	/
/	RFU12	91	92	RFU11	/
/	RFU14	93	94	RFU13	/
	GND	95	96	GND	
/	RFU16	97	98	RFU15	/
	NC	99	100	RFU17	/
	NC	101	102	NC	
	NC	103	104	NC	
	NC	105	106	NC	
	NC	107	108	NC	
	GND	109	110	GND	
	GND	111	112	GND	
	NC	113	114	NC	
	EXT_5V	115	116	EXT_5V	

JH1						
EXT_5V 117 118 EXT_5V						
	EXT_5V	119	120	EXT_5V		

JH2					
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground
g	NC	5	6	NC	
	NC	7	8	NC	
	Port1_T0+	9	10	Port2_T0+	
	Port1_T0-	11	12	Port2_T0-	
	NC	13	14	NC	
	Port1_T1+	15	16	Port2_T1+	
	Port1_T1-	17	18	Port2_T1-	
Gigabit Ethernet port	NC	19	20	NC	Gigabit Ethernet port
Gigabit Ethernet port	Port1_T2+	21	20	Port2_T2+	Gigabit Ethernet port
	Port1_T2-	23	24	Port2_T2-	
	NC	25	24	NC	
	_	25			
	Port1_T3+		28	Port2_T3+	
	Port1_T3-	29	30	Port2_T3-	
	NC	31	32	NC	
	NC	33	34	NC	
Test button	TEST_INPUT_KEY	35	36	STA_LED-	Running indicator (active low)
	GND	37	38	GND	
Line decoding signal	А	39	40	DCLK1	Shift clock output 1
Line decoding signal	В	41	42	DCLK2	Shift clock output 2
Line decoding signal	С	43	44	LAT	Latch signal output
Line decoding signal	D	45	46	CTRL	Afterglow control signal
Line decoding signal	Е	47	48	OE_RED	Display enable signal
Display enable signal	OE BLUE	49	50	OE_GREEN	Display enable signal
	GND	51	52	GND	
/	Data2	53	54	Data1	/
	Data4	55	56	Data3	/
	Data6	57	58	Data5	/
/	Data8	59	60	Data7	/
/	Data10	61	62	Data9	/
/	Data10	63	64	Data11	/
/	GND	65	66	GND	/
/	Data14	67	68	Data13	/
	Data14	69	70	Data15	1
	Data18	71	70	Data15	/
					/
1	Data20	73	74	Data19	/
1	Data22	75	76	Data21	/
	Data24	77	78	Data23	/
	GND	79	80	GND	
	Data26	81	82	Data25	/
1	Data28	83	84	Data27	/
	Data30	85	86	Data29	/
	Data32	87	88	Data31	/
/	Data34	89	90	Data33	/
/	Data36	91	92	Data35	/
	GND	93	94	GND	
/	Data38	95	96	Data37	/
/	Data40	97	98	Data39	/
/	Data42	99	100	Data41	/
/	Data44	101	102	Data43	/
	Data46	103	104	Data45	/
/	Data48	105	106	Data47	/
	GND	107	108	GND	
	NC	109	110	NC	
	NC	111	112	NC	
	NC	113	112	NC	
	NC	115	116	NC	
	GND	117	118	GND	
		117	110		l

JH2						
	GND	119	120	GND		

The recommended power input is 5.0 V.

OE_RED, OE_GREEN and OE_BLUE are display enable signals. When RGB are not controlled separately, use OE_RED. When the PWM chip is used, they are used as GCLK signals.

In the mode of 128 groups of serial data, Data65–Data128 are multiplexed into Data1–Data64.

Reference Design for Extended Functions

	Pins for Extended Functions							
Pin	Recommended Smart Module Pin	Recommended Module Flash Pin	Description					
RFU4	HUB_SPI_CLK	Reserved	Clock signal of serial pin					
RFU6	HUB_SPI_CS	Reserved	CS signal of serial pin					
RFU8	HUB_SPI_MOSI	/	Module Flash data storage input					
KFU0	/	HUB_UART_TX	Smart module TX signal					
RFU10	HUB_SPI_MISO	/	Module Flash data storage output					
REUIU	/	HUB_UART_RX	Smart module RX signal					
RFU3	HUB_(CODE0						
RFU5	HUB_(CODE1	Madula Floch DUS control nin					
RFU7	HUB_(CODE2	Module Flash BUS control pin					
RFU9	HUB_(CODE3						
RFU11	HUB_H1	64_CSD	74HC164 data signal					
RFU13	HUB_H1	HUB_H164_CLK						
RFU14	POWEI	Dual newar auguly datastics sized						
RFU16	POWEI	Dual power supply detection signal						
RFU15	MS_I	MS_DATA						
RFU17	MS	_ID	Dual card backup identifier signal					

Note

The RFU8 and RFU10 are signal multiplex extension pins. Only one pin from either the Recommended Smart Module Pin or the Recommended Module Flash Pin can be selected at the same time.

Specifications

Maximum Resolution	512×512 pixels	
Electrical Parameters	Input voltage	DC 3.3 V to 5.5 V
	Rated current	0.5 A
	Rated power consumption	2.5 W
Operating Environment	Temperature	-20°C to +70°C
	Humidity	10% RH to 90% RH, non-condensing
Storage Environment	Temperature	–25°C to +125°C
	Humidity	0% RH to 95% RH, non-condensing
Physical Specifications	Dimensions	70.0 mm × 45.0 mm × 8.0 mm
	Net weight	22.3 g
Packing Information	Packing specifications	An antistatic bag and anti-collision foam are provided for each receiving card. Each packing box contains 40 receiving cards.



Packing box dimensions	378.0 mm × 190.0 mm × 120.0 mm
------------------------	--------------------------------

The amount of current and power consumption may vary depending on various factors such as product settings, usage, and environment.

Copyright © 2022 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

Trademark

NOVASTAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

I'AN NOVASTAR TECH CO.'

Official website www.novastar.tech

Technical support support@novastar.tech