

Taurus Series Multimedia Player



Change History

Document Version	Release Date	Description		
V1.1.2	2022-03-15	Updated the legends on the appearance pictures.		
V1.1.1	2021-12-17	 Updated the descriptions of the USB (Type B) port and Gigabit Ethernet port. Added a note for the dimension drawings. Added the gross weight of the product. 		
V1.1.0	2021-11-03	Updated the product appearance pictures.		
V1.0.1	2021-09-30	 Added certification information. Updated the description of the playback performance. Updated the product pictures. Added net weight. 		
V1.0.0	2021-08-10	First release		

Introduction

The T50 is a new generation of multimedia player created by NovaStar for full-color LED displays. This multimedia player integrates playback and sending capabilities, allowing users to publish content and control LED displays with a computer, mobile phone, or tablet. Working with our superior cloud-based publishing and monitoring platforms, the T50 enables users to manage LED displays from an Internet-connected device anywhere, anytime.

Support for multi-screen synchronous playback and synchronous and asynchronous modes makes this multimedia player a perfect fit for a wide range of applications.

Thanks to its reliability, ease of use, and intelligent control, the T50 becomes a winning choice for commercial LED displays and smart city applications such as fixed displays, lamp-post displays, chain store displays, advertisement players, mirror displays, retail store displays, door head displays, shelf displays, and much more.

Certifications

CE, RoHS, FCC, IC, FCC ID, IC ID, UKCA

If the product does not have the relevant certifications required by the countries or regions where it is to be sold, please contact NovaStar to confirm or address the problem. Otherwise, the customer shall be responsible for the legal risks caused or NovaStar has the right to claim compensation.

Features

Output

Loading capacity up to 1,300,000 pixels

Maximum width: 4096 pixels Maximum height: 4096 pixels

2x Gigabit Ethernet ports

These two ports serve as primary by default. Users can also set one as primary and the other as backup.

1x Stereo audio connector

The audio sample rate of the internal source is fixed at 48 KHz. The audio sample rate of the external source supports 32 KHz, 44.1 KHz, or 48 KHz. If NovaStar's multifunction card is used

for audio output, audio with a sample rate of 48 KHz is required.

1x HDMI 1.4 connector

Maximum output: 1080p@60Hz, support for HDMI loop

<u>Input</u>

1x HDMI 1.4 connector

In synchronous mode, video sources input from this connector can be scaled to fit the entire screen automatically.

2x Sensor connectors

Connect to brightness sensors or temperature and humidity sensors.

Control

- 1x USB 3.0 (Type A) port
 - Allows for playback of content imported from a USB drive and firmware upgrade over USB.
- 1x USB (Type B) port
 - Connects to the control computer for content publishing and screen control.
- 1x Gigabit Ethernet port
 - Connects to the control computer, a LAN or public network for content publishing and screen control.

Performance

- Powerful processing capacity
 - Quad-core ARM A55 processor @1.8 GHz
 - Support for H.264/H.265 4K@60Hz video decoding
 - 1 GB of onboard RAM
 - 16 GB of internal storage
- Flawless playback
 - 2x 4K, 6x 1080p, 10x 720p, or 20x 360p video playback

Function


- All-round control plans
 - Enables users to publish content and control screens from a computer, mobile phone, or tablet.

- Allows users to publish content and control screens from anywhere, anytime.
- Allows users to monitor screens from anywhere, anytime.
- Switching between Wi-Fi AP and Wi-Fi STA
 - In Wi-Fi AP mode, the user terminal connects to the built-in Wi-Fi hotspot of the T50. The default SSID is "AP+Last 8 digits of SN" and the default password is "12345678".
 - In Wi-Fi STA mode, the user terminal and the T50 are connected to the Wi-Fi hotspot of a router.
- Synchronous and asynchronous modes
 - In asynchronous mode, the internal video source works.
 - In synchronous mode, the video source input from the HDMI connector works.
- Synchronous playback across multiple screens
 - NTP time synchronization
 - GPS time synchronization (The specified 4G module must be installed.)
 - RF time synchronization (The specified RF module must be installed.)
- Support for 4G modules

The T50 ships without a 4G module. Users have to purchase 4G modules separately if needed.

Network connection priority: Wired network > Wi-Fi network > 4G network When multiple types of networks are available, the T50 will choose a signal automatically according to the priority.

Appearance

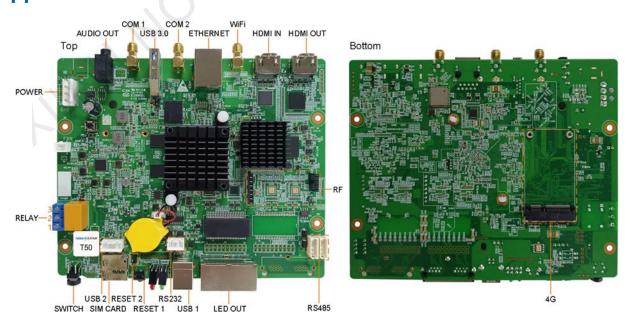

All product pictures shown in this document are for illustration purpose only. Actual product may vary.

Name	Description					
SWITCH	Switches between synchronous and asynchronous modes					
	Staying on: Synchronous modeOff: Asynchronous mode					
USB 2	A reserved USB port					
SIM CARD	SIM card slot					
	Capable of preventing users from inserting a SIM card in the wrong orientation					
RESET 2	Reset connector used to reset the product to its factory settings					
RESET 1	Reset button					
	Press and hold this button for 5 seconds to reset the product to its factory settings.					
RS232	External expansion connector					
USB 1	USB (Type B) port					
	Connects to the control computer for content publishing and screen control.					
LED OUT	Gigabit Ethernet outputs					
RS485	Sensor connectors					
	Connect to light sensors or temperature and humidity sensors.					
RF	RF module connector					
HDMI OUT	HDMI 1.4 output connector, support for HDMI loop					
HDMI IN	 HDMI 1.4 input connector, HDMI video input in synchronous mode In synchronous mode, users can enable full-screen scaling to adjust the image to fit the screen automatically. Requirements for full-screen scaling in synchronous mode: 64 pixels ≤ video source width ≤ 2048 pixels Images can only be scaled down and cannot be scaled up. 					
NA/IF:						
WiFi	Wi-Fi antenna connector Support for switching between Wi-Fi AP and Wi-Fi Sta					
ETHERNET	Gigabit Ethernet port					
ETTERMET	Connects to the control computer, a LAN or public network for content publishing and screen					
	control.					
COM 2	GPS antenna connector					
USB 3.0	USB 3.0 (Type A) port					
	Allows for playback of content imported from a USB drive and firmware upgrade over USB.					
	The Ext4 and FAT32 file systems are supported. The exFAT and FAT16 file systems are not supported.					
COM 1	4G antenna connector					
AUDIO OUT	Audio output connector					
POWER	Power input connector					
RELAY	3-pin relay control switch					

Name	Description					
	DC: Maximum voltage and current: 30 V, 3 A					
	AC: Maximum voltage and current: 250 V, 3 A					
	 Two connection methods: Common switch: The connection method of pins 2 and 3 is not fixed. Pin 1 is not connected to the wire. On the power control page of ViPlex Express, turn on the circuit to connect pin 2 to pin 3, and turn off the circuit to disconnect pin 2 from pin 3. 					
	• Single pole double throw switch: The connection method is fixed. Connect pin 2 to the pole. Connect pin 1 to the turn-off wire and pin 3 to turn-on wire. On the power control page of ViPlex Express, turn on the circuit to connect pin 2 to pin 3 and disconnect pin 1 form pin 2, or turn off the circuit to disconnect pin 3 from pin 2 and connect pin 2 to pin 1.					
	Note: The T50 uses DC power supply. Using the relay to directly control AC is not recommended. If it is required to control AC, the following connection method is recommended.					
	Power supply for solid-state relay (weak current, 3 V~30 V) V+ GND Live wire					
	Relay Connectors 2 3 + Strong current terminal 2					
4G	4G module slot					

Indicators




Name	Color	Status	Description		
PWR	Red	Staying on The power supply is working properly.			
SYS	Green	Flashing once every 2s	The T50 is functioning normally.		
		Flashing once every second	The T50 is installing the upgrade package.		
		Flashing once every 0.5s	The T50 is downloading data from the Internet or copying the upgrade package.		
		Staying on/off	The T50 is abnormal.		
CLOUD	Green	Staying on	The T50 is connected to the Internet and the connection is available.		
		Flashing once every 2s	The T50 is connected to VNNOX and the connection is available.		
RUN	Green	Flashing once every second	No video signal		

www.novastar.tech

Name	Color	Status	Description	
	Flashing once every 0.5		The T50 is functioning normally.	
Staying on/off		Staying on/off	FPGA loading is abnormal.	

Dimensions

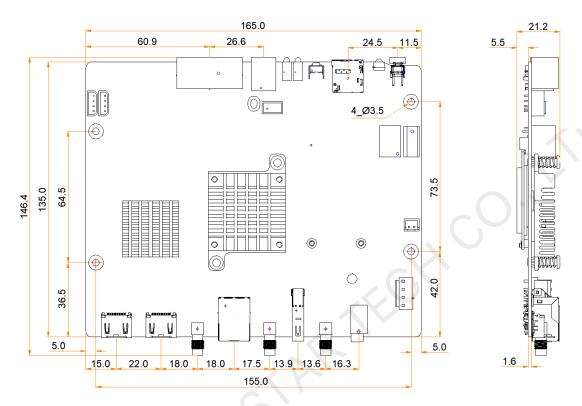

Tolerance: ±0.3 Unit: mm

If you want to make molds or trepan mounting holes, please contact NovaStar for structural drawings with higher precision.

Specifications

Electrical Parameters	Input voltage	DC 5 V~12 V		
	Maximum power consumption	18 W		
Storage Capacity	RAM	1 GB		
	Internal storage	16 GB		
Operating Environment	Temperature	-20°C to +60°C		
	Humidity	0% RH to 80% RH, non-condensing		
Storage Environment	Temperature	-40°C to +80°C		
	Humidity	0% RH to 80% RH, non-condensing		
Physical Specifications	Dimensions	165.0 mm × 146.4 mm × 21.2 mm		
	Net weight	184.5 g		

www.novastar.tech

	Gross weight	374.0 g Note: It is the total weight of the product, printed materials and packing materials packed according to the packing specifications.
Packing Information	Dimensions	278.0 mm × 63.0 mm × 221.0 mm
	List	 1x T50 1x Wi-Fi omnidirectional antenna 1x Power connector 2x IPex cables 1x Quick Start Guide
System Software	 Android 11.0 operating system Android terminal application so FPGA program Note: Third-party applications ar 	oftware

The power consumption may vary according to the setup, environment and use of the product as well as many other factors.

Media Decoding Specifications

<u>Image</u>

Category	Codec	Supported Image Size	Container	Remarks
JPEG	JFIF file format 1.02	96×32 pixels to 817×8176 pixels	JPG, JPEG	No support for non-interlaced scan Support for SRGB JPEG Support for Adobe RGB JPEG
ВМР	ВМР	No Restriction	ВМР	N/A
GIF	GIF No Restriction		GIF	N/A
PNG	PNG No Restriction		PNG	N/A
WEBP	WEBP	No Restriction	WEBP	N/A

<u>Video</u>

Category	Codec	Resolution	Maximum Frame Rate	Maximum Bit Rate (Ideal Case)	File Format	Remarks
MPEG-1/2	MPEG- 1/2	48×48 pixels to 1920×1088 pixels	30fps	80Mbps	DAT, MPG, VOB, TS	Support for field coding
MPEG-4	MPEG4	48×48 pixels to 1920×1088 pixels	30fps	38.4Mbps	AVI, MKV, MP4, MOV, 3GP	No support for MS MPEG4 v1/v2/v3, GMC
H.264/AVC	H.264	48×48 pixels to 4096×2304 pixels	2304p@60fps	80Mbps	AVI, MKV, MP4, MOV, 3GP, TS, FLV	Support for field coding and MBAFF
MVC	H.264 MVC	48×48 pixels to 4096×2304 pixels	2304p@60fps	100Mbps	MKV, TS	Support for Stereo High Profile only

Category	Codec	Resolution	Maximum Frame Rate	Maximum Bit Rate (Ideal Case)	File Format	Remarks
H.265/HEVC	H.265/ HEVC	64×64 pixels to 4096×2304 pixels	2304p@60fps	100Mbps	MKV, MP4, MOV, TS	Support for Main Profile, Tile & Slice
GOOGLE VP8	VP8	48×48 pixels to 1920×1088 pixels	30fps	38.4Mbps	WEBM, MKV	N/A
GOOGLE VP9	VP9	64×64 pixels to 4096×2304 pixels	60fps	80Mbps	WEBM, MKV	N/A
H.263	H.263	SQCIF (128×96) QCIF (176×144) CIF (352×288) 4CIF (704×576)	30fps	38.4Mbps	3GP, MOV, MP4	No support for H.263+
VC-1	VC-1	48×48 pixels to 1920×1088 pixels	30fps	45Mbps	WMV, ASF, TS, MKV, AVI	N/A
MOTION JPEG	MJPEG	48×48 pixels to 1920×1088 pixels	60fps	60Mbps	AVI	N/A

FCC Caution

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient of relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit difference from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Note:

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Country Code selection feature to be disabled for products marketed to the US/Canada.

- The antenna must be installed such that 20 cm is maintained between the antenna and users, and
- The transmitter module may not be co-located with any other transmitter or antenna.

As long as the three conditions above are met, further transmitter testing will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

Important Note:

In the event that these conditions cannot be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID cannot be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

End Product Labeling:

The final end product must be labeled in a visible area with the following "Contains FCC ID:2AG8JT60"

If the FCC identification number is not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. This exterior label can use wording such as the following; Contains Transmitter Module FCC ID: 2AG8JT60.

Manual Information to the End User:

The OEM integrator has to be aware not provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

The end user manual shall include all required regulatory information/warning as show in this manual.

When the module is installed inside another device, the user manual of this device must contain below warning statements:

- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
 - This device may not cause harmful interference,
 - This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's
 authority to operate the equipment. The devices must be installed and used in strict accordance with the
 manufacturer's instructions as described in the user documentation that comes with the product.

ISED Statement

English: This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

French: Le présentappareilestconforme aux CNR d'Industrie Canada applicables aux appareils

radio exempts de licence. L'exploitationestautorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareildoit accepter tout brouillageradioélectriquesubi, mêmesi le brouillageest susceptible d'encompromettre le fonctionnement.

This radio transmitter (ISED certification number: 23873-T60) has been approved by Industry Canada to operate with the antenna types listed with the maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (ISED certification number: 23873-T60) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal. Les types d'antenne non inclus dans cette liste, et dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Radiation Exposure Statement

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé. Cet équipement doit être installé et utilisé à distance minimum de 20cm entre le radiateur et votre corps.

This device is intended only for OEM integrators under the following condition:

The transmitter module may not be co-located with any other transmitter or antenna.

As long as the condition above is met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

Cet appareil est conçu uniquement pour les intégrateurs OEM dans les conditions suivantes:

Le module émetteur peut ne pas être coïmplanté avec un autre émetteur ou antenne.

Tant que les 1 condition ci-dessus sont remplies, des essais supplémentaires sur l'émetteur ne seront pas nécessaires. Toutefois, l'intégrateur OEM est toujours responsable des essais sur son produit final pour toutes exigences de conformité supplémentaires requis pour ce module installé.

Important Note:

In the event that these conditions cannot be met (for example certain laptop configurations or co-location with another transmitter), then the Canada authorization is no longer considered valid and the IC cannot be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate Canada authorization.

Note Importante:

Dans le cas où ces conditions ne peuvent être satisfaites (par exemple pour certaines configurations d'ordinateur portable ou de certaines co-localisation avec un autre émetteur), l'autorisation du Canada n'est plus considéré comme valide et l' IC ne peut pas être utilisé sur le produit final. Dans ces circonstances, l'intégrateur OEM sera chargé de réévaluer le produit final (y compris l'émetteur) et l'obtention d'une autorisation distincte au Canada.

End Product Labeling

The final end product must be labeled in a visible area with the following: Contains IC: 23873-T60.

Plaque signalétique du produit final

Le produit final doit être étiqueté dans un endroit visible avec l'inscription suivante: Contient des IC: 23873-T60

Manual Information to the End User

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

The end user manual shall include all required regulatory information/warning as show in this manual.

Manuel d'information à l'utilisateur final

L'intégrateur OEM doit être conscient de ne pas fournir des informations à l'utilisateur final quant à la façon d'installer ou de supprimer ce module RF dans le manuel de l'utilisateur du produit final qui intègre ce module.

Le manuel de l'utilisateur final doit inclure toutes les informations réglementaires requises et avertissements comme indiqué dans ce manuel.

Radiation Exposure Statement

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cetéquipementestconforme Canada limites d'exposition aux radiations dans un environnement non contrôlé. Cetéquipement doitêtre installé et utilisé à distance minimum de 20cm entre le radiateur et votre corps.

Integration Instructions for Host Product Manufacturers According to KDB 996369 D03 OEM Manual v01

List of applicable FCC rules

FCC Part 15 Subpart C 15.247 & 15.209

Specific operational use conditions

The module is a 2.4G WiFi module.

Operation Frequency: 2412-2462MHz Number of Channel: 11

Modulation: DSSS, OFDM

Type: Helix Antenna Gain: 5.03 dBi Max.

www.novastar.tech

The module can be used for mobile or portable applications with a maximum 5.03dBi antenna. The host manufacturer installing this module into their product must ensure that the final composite product complies with the FCC requirements by a technical assessment or evaluation to the FCC rules, including the transmitter operation. The host manufacturer has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module. The end user manual shall include all required regulatory information/warning as show in this manual.

Limited module procedures

Not applicable. The module is a Single module and complies with the requirement of FCC Part 15.212.

Trace antenna designs

Not applicable. The module has its own antenna, and doesn't need a host's printed board micro strip trace antenna etc.

RF exposure considerations

The module must be installed in the host equipment such that at least 20cm is maintained between the antenna and users' body; and if RF exposure statement or module layout is changed, then the host product manufacturer required to take responsibility of the module through a change in FCC ID or new application. The FCC ID of the module cannot be used on the final product. In these circumstances, the host manufacturer will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

Antennas

Antenna Specification are as follows:

Type: Helix Antenna

Gain: 5.03 dBi

This device is intended only for host manufacturers under the following conditions: The transmitter module may not be co-located with any other transmitter or antenna; the module shall be only used with the internal antenna(s) that has been originally tested and certified with this module. The antenna must be either permanently attached or employ a 'unique' antenna coupler.

As long as the conditions above are met, further transmitter test will not be required. However, the host manufacturer is still responsible for testing their end-product for any additional compliance requirements required with this module installed (for example, digital device emissions, PC peripheral requirements, etc.).

Label and compliance information

Host product manufacturers need to provide a physical or e-label stating "Contains FCC ID: 2AG8JT60" with their finished product.

Information on test modes and additional testing requirements

Operation Frequency: 2412-2462MHz

Number of Channel: 11 Modulation: DSSS, OFDM

Host manufacturer must perform test of radiated & conducted emission and spurious emission, etc. according to the actual test modes for a stand-alone modular transmitter in a host, as well as for multiple simultaneously transmitting modules or other transmitters in a host product. Only when all the test results of test modes comply with FCC requirements, then the end product can be sold legally. 2.10 Additional testing, Part 15 Subpart B disclaimer. The modular transmitter is only FCC authorized for FCC Part 15 Subpart C 15.247 & 15.209 and that the host product manufacturer is responsible for compliance to any other FCC rules that apply to the host not covered by the modular transmitter grant of certification. If the grantee markets their product as being Part 15 Subpart B compliant (when it also contains unintentional-radiator digital circuity), then the grantee shall provide a notice stating that the final host product still requires Part 15 Subpart B compliance testing with the modular transmitter installed.

Copyright © 2022 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

Trademark

NOVA 5TAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

Official website www.novastar.tech

Technical support support@novastar.tech